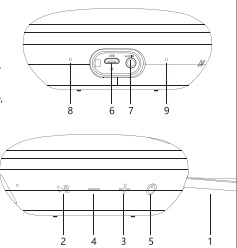

 <p>ROXEL Waterproof Small size, big sound</p> <p><i>Inspire Your Soul</i></p> <p>RXB-180BT</p>	<p>PARTS AND FUNCTIONS</p> <ol style="list-style-type: none"> 1. Carabiner hole 2. The multi -function buttons: play/pause/answer call 3. + : Short press to increase the volume, long press for next song 4. - : Short press to decrease the volume, long press for previous song 5. Power button : Long press to power on, short press to switch to the playing mode 6. USB charging port 7. AUX IN cable connection interface 8. Microphone port 9. The charge indicator & wireless indicator 	<p>TWS CONNECTION STEPS</p> <ol style="list-style-type: none"> 1. Long press the "start up" button to turn on both speakers (make sure that the Bluetooth connection is turned off on devices such as mobile phones / tablets) 2. Press "pause" on one of the speakers for 3 to 5 seconds (host) 3. Pairing state 4. Successful pairing (the speaker that flashes faster is the host)  <p>CHARGING</p> <p>Please use the charging cable provided in the box and plug in a power output using the USB port. It is recommended to charge 10 minutes before power on if the item is not used for longer than 7 days, then the product can be used while charging.</p>	<p>POWER ON/OFF</p> <p>Power on: Long press power button on the speaker, then the Bluetooth indicator light is on and you can connect Bluetooth devices.</p> <p>Power off: Long press power button on the speaker, and then Bluetooth indicator will turn off.</p> <p>WIRELESS HANDSFREE</p> <ol style="list-style-type: none"> 1. Connect your phone via Bluetooth connection, the speaker will ring while there is an incoming call 2. Short press the multifunction key to answer the call on the speaker, you can talk through the microphone hole, once the call ends, speaker will continue to play music 3. Long press the multifunction key on the speaker to reject an incoming call 4. When you connect your phone, rapidly tap multifunction key twice to call back the last dialed number. <p>VOLUME ADJUSTMENT</p> <p>Long press the +/-keys to adjust the volume or volume on the device.</p>	<p>TECHNICAL INFORMATION</p> <ul style="list-style-type: none"> • Model: ROXEL RXB 180BT • Wireless version: 4.2+ EDR • Play time: 8 hours (medium volume), • Input power: DC 5V/ 1A • Charge time: 2.5 hours, • Wireless connection range: 8-12m (barrier free) • Battery capacity: 3.7V/500mAh • Low power prompt Volume reduction by 30% • There are prompts every 3 minutes • Speaker: 3W x 1 • Size: 100 x100x45mm • Weight: 230 g <p>IPX7 WATERPROOF</p> <p>This product comes with IPX7 technology. This product can be submerged into water for up to 30 minutes up to 100 CM depth.</p> <p>Soak time: 30 min</p>
---	---	---	--	--

<p>FAULT AND MAINTENANCE</p> <p>Faulty Connection, Solution: (1) Please check whether the multifunction indicator light is flashing blue, Please power on your speakers if the light isn't on. Please charge the speaker if the light is still not on.</p> <p>(2) Please turn off other Bluetooth devices, multiple Bluetooth devices may result in difficulties in search.</p> <p>(3) Restart wireless speaker on devices for wireless search function.</p> <p>Sound is breaking, Solution: (1) Make sure the distance between the streaming device and the speaker is not exceeded maximum Bluetooth connection distance 8-12meters.</p> <p>(2) Ensure there is not any obstacles between the streaming device and speakers.</p> <p>(3) Check the streaming device or whether the speaker is in a low power state,</p>	<p>NOTES BEFORE USE</p> <p>This product is designed with full attention for safety performance. To ensure safe operation, please follow the following rules:</p> <ol style="list-style-type: none"> 1. Place the speakers in a stable position avoid fall and cause damage or personal injury. 2. Do not drop, disassemble, open, crush, bend, puncture or burn the speaker. 3. Do not use the speaker close to any heat source (such as radiators, heating equipment, stoves, or other heat-generating equipment) where the use of speakers 4. Please send professional maintenance staff to repair for any reason damage. 5. Please power of the speaker wiping with a dry cloth to clean the speakers and unplug the power cord from the power outlet 6. Please adjust the sound to a suitable level for not damaging the hearing <p>PACKAGE INCLUDING</p> <ul style="list-style-type: none"> • 1x ROXEL RXB 180BT wireless speaker • • 1x Product manual • 1x Micro USB cable 	<p>SAFETY AND MAINTENANCE</p> <p>Please read suggestions below in order to help prolong the product lifespan and clearly understand the warranty clauses.</p> <ul style="list-style-type: none"> • Avoid sun exposure for long time or high heat, High temperatures will shorten the lifespan of electronic components, damage battery and deform some plastic parts. • Do not use the headphone in very low temperatures to avoid damage to battery and electronics board. • Do not attempt to take apart the product • Do not drop, force, misuse to avoid damage to inner electronic circuit. • Do not use chemical products, to clean the item. • Do not scratch the surface with sharp items to avoid damaging the case and appearance. • Do not charge longer than 10 hours for prolonged lifespan. <p><i>If your product is not in working order, Please contact Roxel support team. (support@roxel.co.uk)</i></p>	<p>GUARANTEE AND AFTER SALES SERVICES:</p> <p>Your ROXEL Wireless Speaker is guaranteed for a period of 12 months from the date of purchase.</p> <p>Subject to terms listed below, the guarantee will provide the repair of, at Roxel's or its agent's discretion to replace the device, or any component thereof, (other than batteries), which is identified as faulty or below standard, or as a result of inferior workmanship or materials. Products over 30 days old from the date of purchase may be replaced with a refurbished or repaired product.</p> <ul style="list-style-type: none"> • The conditions of guarantee are: • The guarantee shall only apply to defects that occur within 12 months guarantee period • Proof of purchase is required • The equipment is returned to Roxel Limited or its agent as instructed <p>This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, tampering with the equipment, or any attempt adjustment or repair other than through approved agents.</p> <p>This guarantee does not affect your statutory rights.</p>	<p>PRODUCTS AFTER-SALES SERVICE</p> <p>30 Days Refund Policy</p> <p>A. Guarantee of Refund: Manufacturer will issue a refund or offer a replacement within 30 days from the date of purchase, if the product bought is purchased from Roxel stores or authorised distributors (user-fault and external damage excluded).</p> <p>B. Refund Procedure: Please take the whole set of package and original invoice to the store the product was purchased. The seller will check by Quality Assurance Identification Rules to clarify the problem. If the product is faulty , the seller should issue a refund or offer replacement.</p>
---	--	---	---	--