



ROXEL
Intelligent Splash-proof Portable
 Small size, big sound

AUDIO CABLE CONNECTION

Turn on the speaker.
 Connect a 3.5 mm audio cable to the speaker and your device. The speaker is now connected to your device.

THE MF BUTTON'S FUNCTIONALITY

Play / pause / answer incoming call / end call = short press on the MF-button.

CHANGE VOLUME AND SONG (WHEN LISTENING TO MUSIC)

Increase volume: Short press on the "+" button.
 Decrease volume: Short press on the "-" button.
 Previous song: Long press on the "⏮" button.
 Next song: Long press on the "⏭" button.

DURING A CALL

Increase volume: Long press on the "+" button.
 Decrease volume: Long press on the "-" button.

HANDS-FREE FUNCTIONALITY

1. Connect your phone via Bluetooth connection, the speaker will play ringtones while a call coming.
2. Short press the multifunction key to answer the call on the speaker, you can talk to each other through the microphone hole, after call ended, it will continue to play music.
3. Long press the multifunction key on the speaker to reject an incoming call.
4. After your device is connected, Press multifunction key twice to call back the last call by telephone.

3. Do not close to any heat source (such as radiators, heating equipment, stoves, or other heat-generating equipment) where the use of speakers.
4. Please send professional maintenance staff to repair for any reason damage.
5. Before wiring with a dry cloth to clean the speakers, set the power switch to the off position and unplug the power cord from the power outlet.
6. Health considerations, please adjust the sound to a suitable level.

FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference, and
 (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
 However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

GARANTEE AND AFTER SALES SERVICES:

Your ROXEL Wireless Speaker is guaranteed for a period of 12 months from the date of purchase.

Subject to terms listed below, the guarantee will provide the repair of, at Roxel's or its agent's discretion to replace the device, or any component thereof, (other than batteries), which is identified as faulty or below standard, or as a result of inferior workmanship or materials. Products over 30 days old from the date of purchase may be replaced with a refurbished or repaired product.


- The conditions of guarantee are:
 - The guarantee shall only apply to defects that occur within 12 months guarantee period
 - Proof of purchase is required
 - The equipment is returned to Roxel Limited or its agent as instructed
- This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, tampering with the equipment, or any attempt adjustment or repair other than through approved agents.
 This guarantee does not affect your statutory rights.

SAFETY INSTRUCTIONS (READ ALL INSTRUCTIONS)

Only charge with devices rated and marked with 5V to avoid damage to the speaker.
 Do not open up the speaker, it voids the warranty and may damage the product.
 Rechargeable batteries have a limited number of charge cycles. Battery life and number of charge cycles varies by use and settings.
 Never place the speaker close to high temperature heat sources.
 To keep the warranty valid, never try to repair the product yourself or from an unauthorised technician.

PARTS AND FUCTIONS

1. Wrist strap.
2. Power button
 Press and hold the power button for about 3 seconds to power the speaker on or off.
3. Next song / volume increase
4. Previous song / volume decrease
5. Multi function button
 Multi function button, shortened to "MF button" in this manual.
6. 3.5 mm AUX input.
7. LED indicates status
8. USB charge port
9. Reset
10. Charging LED
 The LED indicates the battery status Red LED is lit: Charging Off / No LED: Fully charged and/or powered off

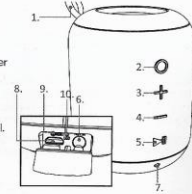

TECHNICAL PARAMETERS

- Model: ROXEL RXB-360BT
- Speaker: 040mm 4Q SW*2
- Charging time: 2.5 hours
- Input: 5.0V - 10A
- Product Weight: 318g
- Wireless: 4.2+EDR compliant
- Built-in rechargeable battery: Li-ion, 3.7V, 2200mAh
- Playing time: 8 hours
- Product size: 84.5*84.5*109mm
- Range: Up to 10m



PACKAGE INCLUDING

- 1x RXB 360BT wireless speaker
- 1x Product manual
- 1x Micro USB cable

TWS CONNECTION

1. Turn on both speakers
2. Press and hold the Play/Pause-button on one of the speakers for about 2 seconds until you hear a "beep" sound.
3. Release Play/Pause button. It can take a few more seconds before speakers connect to each other.
4. Go into the Bluetooth menu on your device and pair the speakers with your phone by selecting the speaker model number. (It will only display 1 number which is both combined in to one)

TWS CONNECTION

1. Press and hold the Play/Pause-button on one of the speakers for about 2 seconds until you hear a "beep" sound

NOTE

When speakers are previously paired with each other. If they do not automatically pair with each other when you turn them on, press and hold the Play/Pause button on one of the speakers for about 2 seconds. It can take a few more seconds before the speakers connect to each other. If you are connected to both speakers without the TWS connection between them, then you have to disconnect from one of the speakers.

Reorient or relocate the receiving antenna.
 Increase the separation between the equipment and receiver.
 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 Consult the dealer or an experienced radio/TV technician for help.

FCC RADIATION EXPOSURE STATEMENT:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

TROUBLESHOOTING

- THE SPEAKER DOES NOT TURN ON?**
 Recharge your speaker.
THE SPEAKER DOES NOT TURN OFF OR DOES NOT RESPOND?
 Reset your speaker.
- THERE IS NO SOUND?**
 Adjust the volume.
 Make sure that your Wireless device is within range.
 Ensure there is no obstacles in the way that can block/disturb the signal.
 Check via the device's Wireless connection if the speaker is connected with the device.
- THERE IS POOR SOUND QUALITY?**
 Move the device closer to the speaker or try removing obstacles between them.
CANNOT CONNECT THE DEVICE WITH THE SPEAKER?
 Disconnect from the other connected devices and then try again.
 You can force a disconnection by moving out of Wireless range (10 m).

PRODUCTS AFTER-SALES SERVICE

30 Days Refund Policy

A. Guarantee of Refund: Manufacturer will issue a refund or offer a replacement within 30 days from the date of purchase, if the product bought is purchased from Roxel stores or authorised distributors (user-fault and external damage excluded).

B. Refund Procedure: Please take the whole set of package and original invoice to the store the product was purchased. The seller will check by Quality Assurance Identification Rules to clarify the problem. If the product is faulty, the seller should issue a refund or offer replacement.

THE SPEAKER'S BATTERY

A built-in rechargeable battery powers the speaker.

CHARGING

Connect the supplied charging cable to the charge input and to a USB port on your computer or a USB charger. The LED light is red during charging. The LED light will off when fully charged. It is recommended to charge 10 minutes before power on if the item is not used for 7 days.

POWER ON/OFF

Power on: Long press power button on the speaker, then the wireless indicator light is on and you can connect wireless devices.
Power off: Long press power button on the speaker, and then wireless indicator will turn off.

CONNECT THE SPEAKER

On your device search for Bluetooth devices. Select the speaker from the list. The speaker will give an indication sound when the connection is successful. Only one Wireless device can be connected at the same time. If you want to connect another device to the speaker, Current one will need to be disconnected.

DISCONNECT THE SPEAKER

On your device, disconnect the Wireless connection with the speaker.

RECONNECT THE SPEAKER

Some Wireless devices support automatic reconnection, with those devices the speaker will automatically reconnect. The speaker will not automatically reconnect on devices that does not support automatic reconnection.

EXPLANATION

1. The symbol indicates that the product is only suitable for the safe non-tropical climates.
2. Note: Please use the same type or equivalent type of battery to replace if the battery is scrapped. Otherwise maybe explosion occurs.
3. The lithium battery may be exposed such as fire or excessive heat.

FAULT AND MAINTENANCE

- Faulty Connection, Solution:
- (1) Please check whether the multifunction indicator light is flashing blue. Please power on your speakers if the light isn't on. Please charge the speaker if the light is still not on.
- (2) Please turn off other Bluetooth devices, multiple Bluetooth devices may result in difficulties in search.
- (3) Restart wireless speaker on devices for wireless search function.
- Sound is breaking, Solution:
- (1) Make sure the distance between the streaming device and the speaker is not exceeded maximum Bluetooth connection distance 8-12meters.
- (2) Ensure there is not any obstacle between the streaming device and speakers
- (3) Check the streaming device or whether the speaker is in a low power state.

NOTES BEFORE USE

This product is designed with full attention for safety performance. To ensure safe operation, please follow the following rules:
 1. Place the speakers in a stable position avoid fall and cause damage or personal injury.
 2. Do not drop, disassemble, open, crush, bend, puncture, burn speaker.

SAFETY AND MAINTENANCE

Please read suggestions below in order to help prolong the product lifespan and clearly understand the warranty clauses.

- Avoid sun exposure for long time or high heat. High temperatures will shorten the lifespan of electronic components, damage battery and deform some plastic parts.
- Do not use the headphone in very low temperatures to avoid damage to battery and electronics board.
- Do not attempt to take apart the product
- Do not drop, force, misuse to avoid damage to inner electronic circuit.
- Do not use chemical products, to clean the item.
- Do not scratch the surface with sharp items to avoid damaging the case and appearance.
- Do not charge longer than 10 hours for prolonged lifespan.

If your product is not in working order, Please contact Roxel support team. (support@roxel.co.uk)

