

ROXEL

Inspire
Your Soul

RGM500BT
Foldable Gaming Wireless Headphone
User Manual

Dear user

Thank you for purchasing RGM500BT-BT foldable stereo wireless headphones.

ROXEL:

@2019 ROXEL, All rights reserved by ROXEL Limited registered in United Kingdom. The logo "ROXEL" is a trademark of ROXEL Limited.

Address

Roxel Limited
Unit 11a Lakes Industrial Park
Lower Chapel Hill
Braintree
Essex
CM7 3RU

✉ support@roxel.co.uk

🌐 www.roxel.co.uk

📘 facebook.com/RoxelUK

🐦 twitter.com/roxeluk


📷 instagram.com/roxel_uk

Accessories List

- 1X Wireless Headphone
- 1X USB Charging Cable
- 1X User Manual



Overview Of Headset

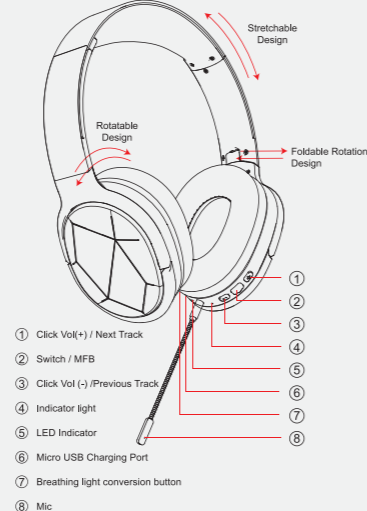

How To Use

- Functional Operation**
 - Power on:** Press and hold ② button 2 seconds under the device is off (The blue light will flash you will hear voice promote "Power on, pairing" at the same time), enter to the pairing mode freely.
 - Play/pause:** Press ② button to pause when it is playing, then press again to play.
 - Volume up:** Click ① button.
 - Volume down:** Click ③ button.
 - Previous Track:** Long press ③ button.
 - Next Track:** Long press ① button.
 - Answer incoming call:** Click ② button.
 - Hang up the phone:** Click ② button.
 - Reject incoming call:** Hold ② button for 2 seconds.
 - Power off:** Press and hold ② button for 3 seconds when headset is in standby or working mode.
 - Redial a call:** Double click ② button (to redial last number).
 - Breathing light conversion:** Click ⑦ button

How To Use

- Connection**
 - Press and hold the MFB for 2 seconds until the headphone powers on and enters pairing mode automatically after 5s. LED indicator flash blue light slowly. (Headphone powers off after 5 minutes if no Bluetooth connected)
 - Activate Bluetooth on your phone (or other devices) and set it to search for new devices.
iPhone: Settings > Bluetooth > On
Android: Settings > Bluetooth > Search for devices
NOTE: Menus may vary by different
 - Select "RGM500BT"
If necessary, enter four zeros (0000) for pass code.

Charging

Please plug Micro USB into eadphone charging port and connect the other side with USB wall charging adapter or computer. LED indicator turns red while charging, and the red light goes out when fully charged. (Headphone reminds you "Battery Low" with prompt voice when the battery power is low)

How To Use

- Bluetooth Specification**
 - Bluetooth Version: V5.1
 - Profile Support: HFP/A2DP/AVCTP/AVDTP/AVRCP
 - Stand-by Time: 100 h
 - Talk Time: 25 h
 - Music Play Time: 14 h
 - Charging Time: 2 h
 - Charging Voltage: DC 5V
 - Frequency Range: 2.402G-2.480G
 - Ambient Temperature: -20/+45°C
 - Transmission Distance: 10m
 - Battery Capacity: 500mAh
- Driver Specification**
 - Driver Unit: 40mm
 - Sensitivity: 122dB ± 3dB
 - Impedance: 32Ω ± 15%
 - Frequency Response: 20-40000Hz

Safety And Maintenance

Please read suggestions below in order understand the warranty clauses and prolong the lifespan of the product.
*Keep the product dry, do not place in wet or humid circumstances.
*Avoid prolonged sun exposure and heat. High temperatures will shorten the lifespan of electronic components, damage battery and deform some plastic parts.
*Do not use the headphone in very low temperatures to avoid damage to PCB board.
*Do not attempt to take the product apart.
*Do not drop, force, misuse or immerse in water to avoid damage to inner electronic circuit.
*Do not use chemical products to clean the item.
*Do not scratch the surface with sharp items to avoid damaging the case and appearance.
*Do not charge longer than 10 hours for prolonged lifespan.

If your product is not in working order, Please contact Roxel support team, (support@roxel.co.uk)

Guarantee and After Sales Services

Your RGM500BT is guaranteed for a period of 12months from the date of purchase
Subject to terms listed below , the guarantee will provide the repair of, at Roxel's or its agent's discretion to replace the device, or any component thereof, (other than batteries), which is identified as faulty or below standard or as a result of inferior workmanship or materials. Products over 30 days old from the date of purchase maybe replaced with a refurbished or repaired product.
The conditions of guarantee are :

* The guarantee shall only apply to defects that occur within 12 months guarantee period

* Proof of purchase is required

*The equipment is returned to ROXEL Ltd, or its agent as instructed

This guarantee does not cover any faults or defects caused by accidents , misuse, fair wear and tear, neglect, tampering with the equipment, or any attempt adjustment or repair other than through approved agents.

This guarantee does not affect your statutory rights