

ROXEL

Roxel Jazz


BLUETOOTH SPEAKER

ID: RS-10 OAK

ID: RS-10WAL


USER MANUAL

Thank you for purchasing device.
Please read this user manual before
operation and save it for the future.

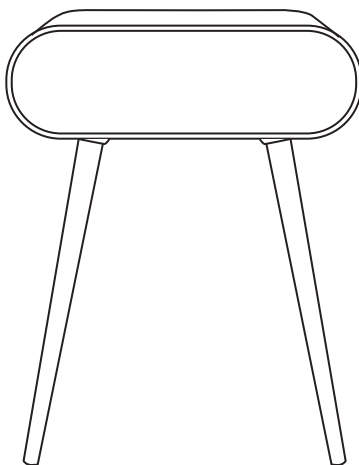


ASSEMBLE STEPS


1.

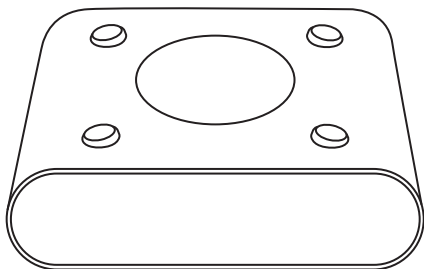


2.

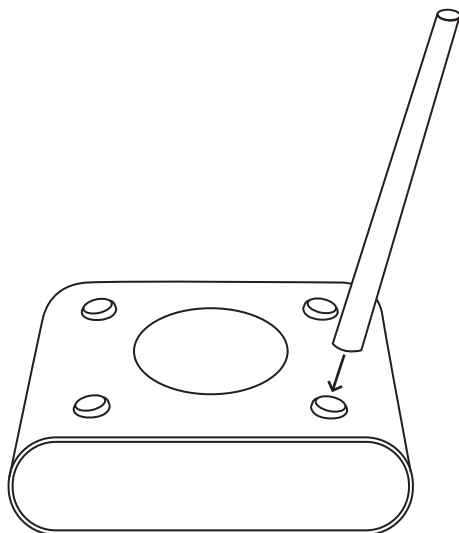


3.

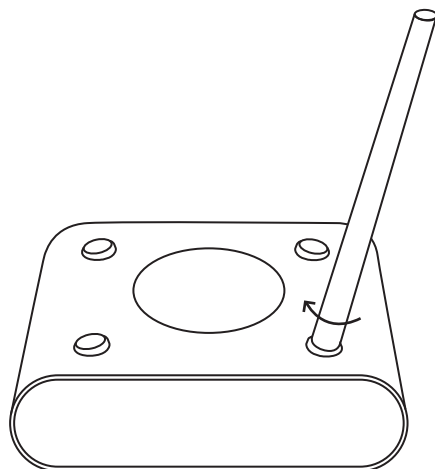

4.



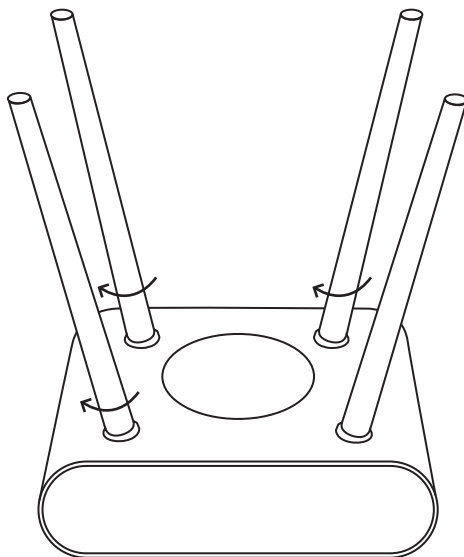


5.

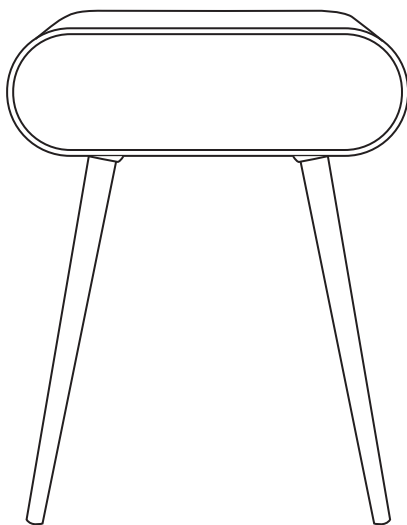

1. Open the gift box and remove the components from it.
Put the speaker on the table and the fixing hole upwards.
Do not place the device on rough surfaces – it can lead to damage of the coating.
2. Take one of wooden legs and match it with one fixing hole.
3. Rotate it clockwise until tightly fixed.
4. Fix another legs same way.
5. Put the speaker on the smooth surface.

ASSEMBLE STEPS

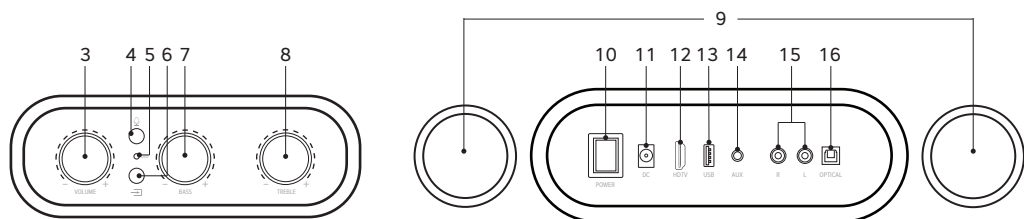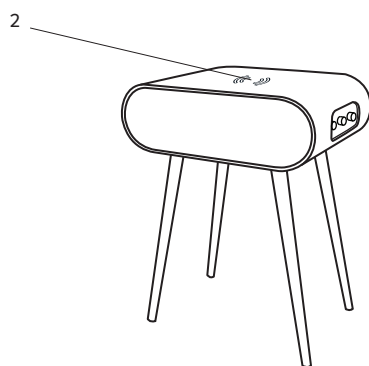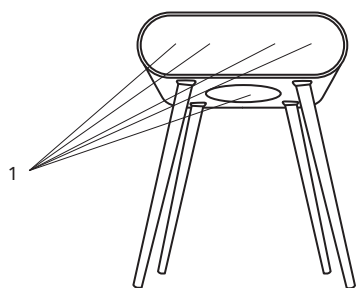

1. Stereo dynamics
2. Wireless Charger

3. Volume control
4. MIC button
5. LED indicator
6. MODE button
7. Bass control
8. Treble control

9. Bass reflex system
10. Power button
11. DC IN for connecting power adapter
12. HDTV
13. USB for playing audio from external USB flash drive
14. Analogue 3.5 mm input (AUX)
15. Analogue input (RCA)
16. Optical input (SPDIF)

SPECIFICATION

	RS-10 OAK		RS-10WAL	
Power	A/C adapter 100~240V, 50~60Hz/22.5 V, 2.7A			
Channels	2.1			
Bluetooth profile	A2DP, HFP, BLE			
Bluetooth version	5.4			
TWS support	Yes, True Wireless Stereo			
Microphone	Yes, to receive calls via Bluetooth connection			
Bluetooth distance	≤10m			
Dynamics	Tweeter: 2.5" 8Ω 10 W x 2 Full range: 4" 8Ω 20 W x 2 Active Bass: 8" 4Ω 60 W			
RMS power	120W			
Bass reflex	Yes, 2 pcs			
Frequency response	35 Hz – 20 kHz			
Signal to noise ratio	≥85Db			
Separation ratio	≥45 Db			
Amplifier	D-class			
SPDIF	Yes			
RCA	Yes, 2 x RCA (L/R)			
AUX	Yes			
Playing audio from external USB flash drive	Yes, MP3, WAV; FAT32 support			
HDTV	Yes			
Wireless charger	1 pc	1 pc		
Remote	Yes			
Materials	Wood			
Dimensions	56 x 40 x 18 cm			
In the box	Device, AUX cable (1.5 m), optical cable (1.5 m), remote, power adapter, user manual			

OPERATION OF THE DEVICE

FIRST CONNECTION

Make sure that the power button (10) is in the "O" position, all cables are disconnected from the speaker and voltage of electrical socket is in range 100-240V before connection speaker to the electrical socket. At first connect power adapter to the device DC IN port (11) and then plug the adapter into to electrical socket.

POWER ON

Turn the power button (10) to "I" position. LED indicator (5) will be turned on.

POWER OFF

Turn the power button (10) to "O" position. LED indicator (5) will be turned off.

OPERATING MODES

Short press of the MODE button (6) will switch operation modes. Each operation mode have unique colour of LED indicator (5).

LED indicator color	Operation mode
Red	STANDBY
Blue	BLUETOOTH
Purple	USB FLASH DRIVE PLAYBACK
Orange	AUX
Light Blue	RCA
White	OPTICAL
Green	HDTV

Also, you can select operation mode using supplied remote controller.

PAIRING VIA BLUETOOTH

1. Turn-on speaker and select BLUETOOTH operation mode.
2. Open Bluetooth setting on your smartphone/PC, enable Bluetooth and search for new devices.
When Bluetooth speaker will be found, confirm pairing.
3. After successful pairing both the Bluetooth speaker and your device, you can control playback by your device or speakers' remote controller.
4. To disable pairing or reconnect you need to press and hold LED button (4).

TRUE WIRELESS STEREO

If you have 2 same models, you can connect them together using Bluetooth. If you have paired Bluetooth devices with speakers, long press this speaker's or another speaker's Mode Button (6) for 4-6 seconds to make TWS connected successfully. Turn on 2 speakers. Be sure that both are in the BLUETOOTH operation mode. Press and hold mode button for 4-6 seconds on one of speakers (this speaker will be main). After 10 seconds 2 speakers will be paired together. Repeat instruction PAIRING VIA BLUETOOTH. Your device will be connected to the main speaker, and main speaker will transfer sound to vice speaker. Long press one of speaker's Mode Button for 4-6 seconds to disable vice speaker, main speaker will be continuous playing music. Long press one of speaker's Mode Button for 4-6 seconds to re-connected TWS. Long press Main speaker's LED Button to disconnect TWS. Long press Vice speaker's LED button to disable Vice speaker.

SOUND CONTROL

Speaker have 3 controls: Volume (3), Bass (7) and Treble (8). To increase volume/bass/treble – rotate needed control clockwise. To reduce – rotate counter clockwise side.

PHONE CALLS

You can receive incoming calls using Bluetooth speaker if it paired with smartphone/tablet PC (table need to be in the BLUETOOTH operation mode). You can talk using built-in mic and dynamic. Short press MIC button (4) to receive incoming call, press one time more to end call. Long press MIC button (4) will reject incoming call.

AUX PLAY

Choose AUX operation mode. Use (supplied) AUX cable and connect it to the Bluetooth speaker's AUX port (14) by one side and to the external device by other side. Be sure that cable is well connected.

«RCA» MODE

Choose RCA operation mode. Use 2 × RCA ↔ 3.5 mm cable (not supplied) and connect it to the Bluetooth speaker's RCA (R/L) port (15) by 2 × RCA jacks and to the external device by 3.5 mm jack side. Be sure that cable is well connected.

«OPTICAL» MODE

Choose OPTICAL operation model. Use (supplied) optical cable and connect it to the Bluetooth speaker's optical port (16) by one side and to the external device by other side. Be sure that cable is well connected.

Choose "PCM" mode for digital output on your TV/other external device.

USB FLASH DRIVE PLAYBACK

Choose USB FLASH DRIVE PLAYBACK operation mode. Connect USB flash drive to the Bluetooth speaker's USB port (13). Use supplied remote controller to control playing.


CHARGING EXTERNAL DEVICES (USB)

You can charge your external devices using built-in USB-A port. Turn on the device, use cable, which is suitable for your device (not supplied), and connect it to the USB port (12) by one side and to the device by other side.

WIRELESS CHARGING (OAK AND WALNUT)

You can charge your compatible device (for example, smartphone) using built-in wireless charger (2). Turn on the speaker, put your device, which is supporting wireless charging function in the middle of the table. When the device is fully charged – put the device off the table.

REMOTE CONTROLLER

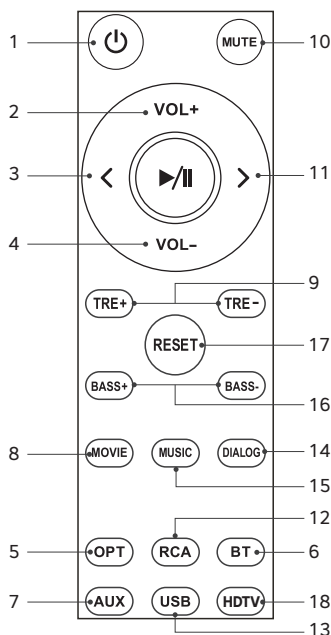

1. Power button (STANDBY operation mode)
2. Volume increase
3. Previous track
4. Volume decrease
5. OPTICAL operation mode
6. BLUETOOTH operation mode (press and hold to disable pairing)
7. AUX operation mode
8. EQ «MOVIE»
9. TREBLE control
10. Mute
11. Next Track
12. RCA operation mode
13. USB FLASH DRIVE PLAYBACK operation mode
14. EQ «DIALOG»
15. EQ «MUSIC»
16. BASS control
17. Hold and press to reset EQ
18. HDTV operation mode

SAFETY INFORMATION

1. Before connecting the power adapter to the electric network be sure that voltage of network is 100-240V.
2. If device is not used, disconnect it from the electric network
3. In cause of breaking, do not try to open and repair device by yourself. Use service center.
4. Avoid influence of the high humidity, dust and dirt. Use dry soft lint-free cloth to clean device. Not allowed to use washing or cleaning liquids.
5. Do not store, use or charge device near heat sources and flammable objects, during low or high ambient temperature. Charing can be done only under adult supervision. Recommended temperature is 5 to 35 °C.
6. Not allowed to drop or hit device.
7. Do not insert foreign objects to the device interfaces.

8. Turn off device after use.
9. Never pull the cord to disconnect cable, pull the plug.
10. Bluetooth speaker is not intended for the commercial use.
11. Bluetooth mode is not intended for the commercial use.
12. Do not cover working device by cloth or other material.
13. The maximum bear weight of the product is 10kg. The product can't be used as a sit, otherwise you can damage your health and the product.

SAFETY INFORMATION FOR USING WIRELESS CHARGER

14. If the personal device supports wired charging from the "USB-network" charger - before using the wireless charger, disconnect the personal device from the "USB-network" charger.
15. Do not put a compliant adapter, such as cover or wireless receiver, on the wireless charger, if it is not connected to the personal device. This may cause the device to malfunction, as well as cause the wireless charger to overheat and cause a fire.
16. The impact of magnetic fields created by wireless charger can damage the magnetic stripe cards, for example bank cards. Do not place magnetic stripe cards near the wireless charger.
17. Do not use wireless charger for charging not compatible devices, devices that not suitable with wireless charger, or broken devices.

STORAGE CONDITIONS

Keep the device in a dry, well-ventilated place, far from heaters and direct sunlight. Keep the device out of reach of children. Do not bite or lick the device, as it may cause damage or explode the device. Children or persons with disabilities should not use the device without supervision of the responsible person.

TECHNICAL CHARACTERISTICS AND APPEARANCE MAY BE CHANGED WITHOUT PRIOR NOTICE



Do not dispose with household waste! Required to dispose this electrical device at designated recycling collection point for electrical devices. This ensures that device is recycled professionally and prevents the release of harmful substance into the environment. Make sure that device is an uncharged before disposal.