

Size: 150x80 mm  
材质: 105g双铜  
工艺: 双面4C印刷，五折六页，风琴折

ROXEL

ROXEL RX-150B  
ROXEL RX-150S  
RETRO WIRELESS HEADPHONES  
USER MANUAL

INCLUDED

1 Joystick Button

2 LED Indicator

3 USB-C Charging & Audio Port

4 Microphone

5 Manual

6 USB-C Charging & Audio Cable

POWER ON CONNECT

Power on and automatically enter pairing mode

\* To enter pairing mode again, power off and then hold **PowerButton** for 5 seconds

CONTROL

Toggle up **once** to increase volume

Toggle up **and hold 1.5s** to skip back

Press **once**

Play or pause audio

Answer or end a call

Press **twice**

Activate voice assistant

Or reject an incoming call

Press **three times**

Turn Spatial Audio on or off

Press **four times**

Turn Transparency Mode on or off

Press and hold

Power on or off

Toggle down **once** to decrease volume

Toggle down **and hold 1.5s** to skip forward

CHARGING

Connect to computer or USB 5V 1A (or less) output device.

FACTORY RESET

BATTERY DISPOSAL

Troubleshooting

| Problem                                                    | Solution                                                                                                                                                                                                                                                      |
|------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Headphones do not switch on                                | Recharge the headphones.                                                                                                                                                                                                                                      |
| Pairing does not work                                      | 1. Make sure the headphones are in pairing mode, with the LED light flashing blue and red alternately.<br>2. Follow the steps described in this user manual.                                                                                                  |
| Mobile phone cannot find the headphones                    | 1. The headphones may be connected to another device — turn off that device or move it out of range.<br>2. "Forget" the headphones from your device's Bluetooth list and reset them.                                                                          |
| The audio quality is poor and crackling noise can be heard | Make sure that your Bluetooth device is within the effective operational range and no obstacles between device and headphone.                                                                                                                                 |
| Microphone not working properly                            | 1. "Forget" the headphones in your device's Bluetooth history, and reset the headphones<br>2. Wear the headphones correctly so the microphone faces your mouth .<br>3. Use the default phone call and try another phone to see if it makes any difference.    |
| Headphones not charging                                    | 1. Try using a different wall charger and cable (5V charger) to charge the headphones for at least 24 hours. It does not matter if the indicator is on or off.<br>2. Make sure the wall charger and cable that you're using is working fine on other devices. |

Please read this manual carefully before use.

!

Safety warnings

Do not place any naked flame sources , such as lighted candles

Dispose of batteries responsibly and be aware of the environmental effects of battery disposal

Do not expose the batteries (batteries installed) to excessive heat, such as fire or the like

!

Warning

To prevent possible hearing damage, do not listen at high volume levels for long periods.

For your own safety, please be aware of your surroundings when using these headphones.

Roxel Limited

Unit 11a Lakes Industrial Park

Lower Chapel Hill

Braintree

Essex

CM7 3RU

01376 340 300

support@roxel.co.uk

www.roxel.co.uk

facebook.com/RoxelUK

twitter.com/roxeluk

instagram.com/roxel\_uk