ROXEL

USER MANUAL

VERTICAL INFRARED HEATER

MODEL NO : RH-510FS

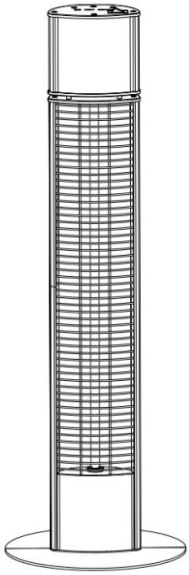

Please read instructions carefully before use.

Safety warning

Please read all instructions before trying to operate this device. Keep the assembly instructions for future reference. Keep the assembly instructions for future reference. When storing the heater during a long period of non-use, please keep the original packaging for use.

-Please read all instructions before using this device.

-Do not leave this device unattended when using it.

-This heater will get hot when in use. Do not touch hot surfaces.

-Note: Some parts of this product may become very hot and cause burns. When children and vulnerable groups are present, special attention must be paid.

-Do not move the device when using it. Before moving. please wait for the heater to cool completely, and check whether the heater has been unplugged from the power supply.

-Place the device at least Im away from flammable materials such as furniture, trees, leaves, hay and bushes.

-The heater must not face the wall or curtain. The heater element must face the area to be heated.

- warning: to avoid overheating, do not cover the heater. It is forbidden to dry clothes.

-Children aged 8 and above, as well as people with reduced physical, sensory or mental abilities or lack of experience and knowledge, can use this equipment, provided that they have received supervision or guidance on safe use of this equipment and know the dangers involved.

-Children are not allowed to use this equipment alone. Without supervision, children are not allowed to carry out cleaning and user maintenance.

-If there are any signs of damage or malfunction, do not operate the heater.

-Do not try to repair or adjust any electrical or mechanical functions on this device. The device does not contain any user-serviceable parts. Only qualified electricians can carry out maintenance or repair. Trying to repair the equipment yourself will void your warranty.

-If the power cable is damaged, it must be replaced by the manufacturer, agent or professional to avoid danger.

-Do not touch the heat or components with your bare hands. If you touch it unintentionally, use a soft cloth and alcohol to remove the finger marks, otherwise these marks will burn into the components, resulting in premature failure of the heater.

-Do not replace or attempt to replace the components in this product.

-This product is suitable for indoor and outdoor use. Do not use this heater near the bathroom, shower or swimming pool.

-This product must not be exposed outdoors for a long time.

-Do not touch the plug with wet hands.

-Do not run the power cord under the carpet. Do not cover the power cord with carpet, slide or similar covering. Place the power cord away from pedestrians and where you won't trip.

-Do not wrap the power cord around the equipment.

-Do not insert foreign objects into any ventilation or opening of the heater, as this may cause electric shock, fire or damage to the heater.

-To prevent possible fire, don't block the vent.

-There are heating and arc or spark parts inside the heater. Do not use it in areas where gasoline, paint, explosives and/or flammable liquids are used or stored. Keep the equipment away from heated surfaces and open flames.

-Avoid using extension cords as much as possible, as this may overheat and cause a fire. However, if you have to use the extension cable, please make sure that it is suitable for this product, or has been tested for outdoor use, and it is best to install or connect RCD equipment.

-Always ensure that the heater is plugged into a suitable socket, which needs to be tested for outdoor use.

-To disconnect the heater, turn off the main switch and then unplug the plug from the socket. Do not unplug the plug by pulling the power cord.

-Before moving, cleaning or storing, always unplug the equipment to ensure that it is completely cooled.

-This heater is for domestic use only and should not be used for business. Any alternative use not recommended by the manufacturer may cause fire, electric shock or personal injury.

-It is not recommended to use accessories on the heater.

-Warning: This heater is not equipped with a device to control the room temperature. Unless there is continuous supervision, don't use this heater in a small room where no one is there.

-Always use on dry, properly firm, stable, flat and horizontal surfaces.

-Check the communication, cable and pipeline of the external wall. If there is any service line nearby, please don't use the heater. You need to find another line to use this product. -Do not put it directly above or below the power outlet.

-Do not remove any warning labels or signs from the product.

Specification

Model	RH-510FS
Voltage	220-240VAC 50Hz
Adjustable Power	2000W
Safety:	Tip-over auto shut off

INSTALLATION and OPERATION

Accessories

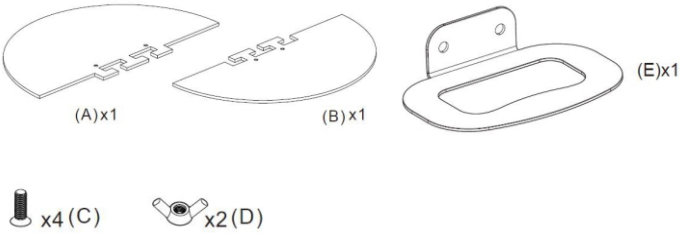

Contents:
(A) Semi-base
(B) Semi-base
(C)M4*10screw*4
(D)Small wing M5 nut*2
(E)Handle

Please check all items against the parts list after opening the box. Installation should only proceed if all items are present and complete.

Step1

Install two semi-base on the heater bottom with 4pcs M4*10 screws.

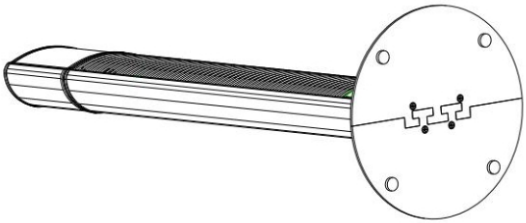

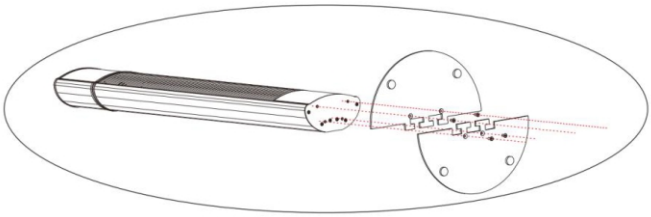

Step2

Install Install the handle one the top behind the heater with 2pcs small wing M5 nut.

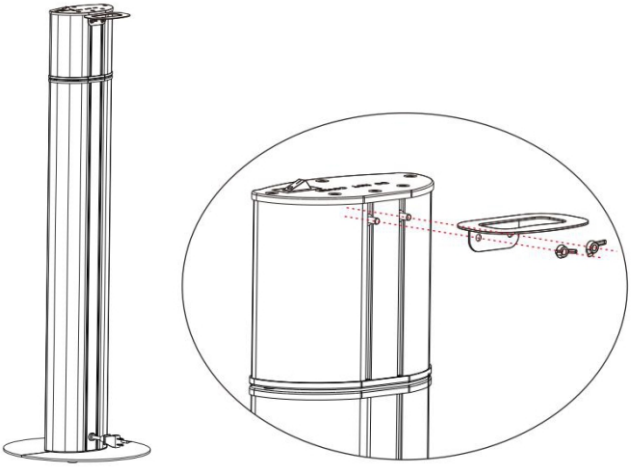

Remote Control

1. Power On/Off button
2.High/Med/Low switch button
3.Child lock button
4.Timer button
5.Down button
6.Set button
7. Up button

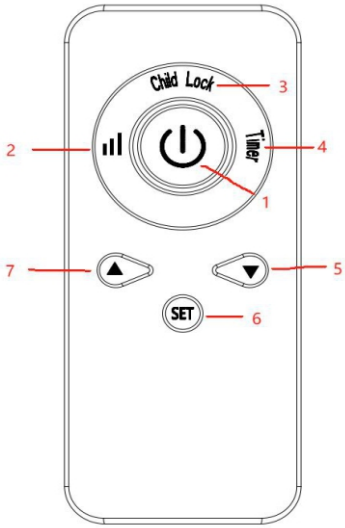

Remote Operations:

1.Plug the heater into a mains power outlet, ensuring the socket matches the voltage and current indicated on the rating label located on the back of the panel.

2.Power On/Off:
Press the “Power On/Off button” to switch the heater on or off.

3. Power Level Setting:
Press the “High/Med/Low switch button” to switch between H1, H2 , and H3 heat settings.

4.Timer Setting:
- Press the Timer Button to enter setup mode
- Select duration (1-24 hours in 1-hour increments)
- Press SET to confirm

5.Child Lock: - Activate: Press “Set button” → “Child lock button”
(icon appears, buttons lock)
- Deactivate: Repeat same steps.

6. Display Sleep: - On: 2x ”Set button ”
- Off: Any button press

Cleaning & Maintenance

- If the inside of the heater becomes covered or clogged up with dust or dirt,please have it cleaned from a qualified service engineer,and do not operate the heater in this state.

- Only clean the exterior of the heater.

- When cleaning the heater,always disconnect the heater from the mains supply,and give the heater adequate time to cool down before cleaning it.

- Do not use solvent cleaners or abrasive materials when cleaning the heater,as this can damage the exterior. Instead,use a mildly damp cloth.

- Do not touch the heating element with your fingers,as not only can this pose a significant risk of injury,but it can also potentially damage the heating element too.

- Do not attempt the repair or adjustment of any mechanical functions of this heater.

If the heater is damaged or defective,it must be returned to the manufacturer or repaired by a qualified professional,as there are many non-user-serviceable parts in the heater.

@2019 Roxel,
All rights reserved by Roxel Limited registered in United Kingdom.
The logo "Roxel"
is a trademark of Roxel Limited.Imported and Distributed by Roxel Ltd.
Unit lla, Lakes industrial estate, lower chapel hill
Essex CM7 3RU United Kingdom
e-mail: suport@roxel.co.ukWeb: www.roxel.co.uk