

Roxel Retro Radio
&
Wireless Speaker
User Manual

Location of Controls

1. ON/OFF switch
2. Opreation mode change button
3.[⏮] press to replay the previous track
4.[⏯] press to play/pause
5.[⏭] press to skip to the next track
6. Aux in socket
7. USB socket
8. Charging Indicator
9. USB Type-C socket for charging
10. FM Radio Knob
11. Volume button
12. Mode indicator light



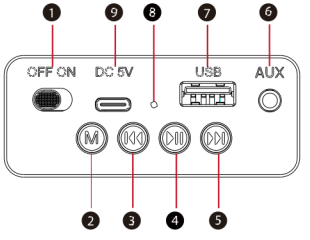

Contents Of The Box

1x Roxel Retro Radio
1x Charging cable
1x User manual

Security Instructions

1.In order to avoid electric shock, do not expose this unit to rain or moisture. Also, do not open the cabinet and refer all repair and maintenance procedures to a qualified service personnel.
2.Do not use the unit if its power cord is damaged in any way.
3.When the unit is not in use, unplug it from the power outlet by holding it directly, never unplug it by pulling on its power cord.
4.The unit should not be exposed to dripping or splashing liquids. Similarly, do not place objects with liquids inside on the unit.
5.Never try to repair or open the unit yourself.
6.Do not place the unit near heat sources, or in places where it will be exposed to direct sunlight.
7.Use the unit only with accessories recommended by the manufacturer.

Bluetooth Connection

1.Set the ON/OFF button to the ON position. -the device will turn on: The blue signalling the BT mode will flashing quickly .
2.Turn on the Bluetooth function on your mobile device and search for the “Roxel RFM-01".
3.Once the connection is successful, the blue BT LED will be steady.

Note: If a previously connected device comes within range of the unit, the unit will connect to this device automatically.

Charging Roxel Retro FM Radio Speaker

Plug the pin of the USB 5V DC charging cable into the DC 5V/USB socket on the back side of the speaker. Plug the other end into a USB port on you computer or any other device allowing USB charging. The LED on the back lights up red when the unit is charging. It will shut off when the battery is fully charged.

Size:224*200mm 90克铜板纸，单面印刷