ROXEL

ROXEL



RCD-800

Music System with DAB+/FM Radio, CD/MP3 Player, USB, Bluetooth | User Manual

Contents

Safety Information 4
Information on Electrical and Electronic (Waste) Equipment 6
Package Contents 9
Location of Controls 10
Remote Control 11
Power Supply & Antennna 12
Basic Functions 12
Time & On-Timer 13
DAB+ Radio 14
FM Radio 15
CD Player 16
USB 17
Bluetooth 17
AUDIO IN 18
Specifications 18
AURACAST OPERATION 18

Safety Information

1. **Read Instructions -** All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions -** The safety and operating instructions should be retained for future reference.
3. **Heed Warnings -** All warnings on the appliance and in the operating instructions should be adhered to.
4. **Water and Moisture –** Do not use the apparatus near water (e.g. bath tub, sink, swimming pool) or in wet places or tropical climates. Do not place objects filled with liquids, such as vases, on top of the apparatus. Do not expose the apparatus to dripping or splashing.
5. **Setup –** The apparatus should only be placed on a stable, flat surface. Do not let the apparatus fall down or expose it to shock.
6. **Wall or Ceiling Mounting -** This appliance is not to be mounted to a wall or ceiling.
7. **Ventilation -** The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings. Ensure a minimum distance of 5 cm around the apparatus for sufficient ventilation. Ensure that the ventilation is not impeded by covering the ventilation openings with items such as newspapers, table-cloths, curtains, etc.
8. **Heat -** The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
9. **Power Sources -** The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
10. **Cables and Plugs –** The mains plug shall remain readily operable. All cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
11. **Cleaning -** The appliance should be cleaned only as recommended by the manufacturer. Clean by wiping with a dry and clean cloth. Do not use chemical cleaners or detergents. Always pull the mains plug before cleaning the unit.
12. **Non-use Periods -** The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
13. **Object and Liquid Entry -** Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
14. **Damage Requiring Service -** The appliance should be serviced by qualified service personnel when:
    a) The power-supply cord or the plug has been damaged; or
    b) Objects have fallen, or liquid has been spilled into the appliance; or
    c) The appliance has been exposed to rain; or
    d) The appliance does not appear to operate normally or exhibits a marked change in performance; or
    e) The appliance has been dropped, or the enclosure damaged.
15. **Servicing -** The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.
16. **Open Fire –** Keep the apparatus away from open fires. Do not place naked flame sources, such as lighted candles on the apparatus.
17. **Thunderstorms –** During a thunderstorm the mains plug should be unplugged.
18. **Safety Check –** After servicing the technician should conduct a safety check in order to ensure that the apparatus is working properly and safely.
19. **Batteries –** Always place batteries in the correct polarization into electrical components. Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type. Do not mix old and new batteries. Take attention to the environmental aspects of battery disposal. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like. Remove batteries before disposing of the product.
20. **Volume Levels** – To prevent possible hearing damage, do not listen at high volume levels for long

periods.

21. **Headphones** *(if applicable)* **–** Excessive sound pressure from earphones and headphones can cause hearing loss.



WARNING: To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



 This symbol indicates USB output.

 This symbol indicates class II equipment.

 This symbol indicates AC voltage.

 This symbol indicates DC voltage.

The mains plug/appliance inlet is used as the disconnect device.

Information on Electrical and Electronic (Waste) Equipment

The following information is intended for private households that use electrical and/or electronic equipment. Please follow these important instructions in the interest of an environmentally sound disposal of old appliances as well as your own safety.

1. Information on the disposal of electrical and electronic (waste) equipment and on the meaning of the symbol in Annex 3 to the ElektroG

Owners of WEEE must dispose of it separately from unsorted municipal waste. WEEE may therefore not be disposed of as unsorted municipal waste and in particular does not belong in household waste. Instead, these WEEE must be collected separately and disposed of, for example, via the local collection and return systems.

Owners of WEEE must also separate used batteries and accumulators that are not enclosed in the WEEE, as well as lamps that can be removed from the WEEE without damaging it, from the WEEE before handing it in at a collection point.

The latter does not apply if the WEEE is separated from other WEEE in accordance with Article 14 (4) sentence 4 or (5) sentences 2 and 3 within the framework of opting out by public waste management authorities for the purpose of preparing it for re-use.



By means of the symbol according to Annex 3 to the ElektroG, owners can recognise old appliances that are to be collected separately from unsorted municipal waste at the end of their life. The symbol for the separate collection of electrical and electronic equipment represents a crossed-out wheeled bin and is designed as shown opposite.

2. Free take-back of WEEE by distributors

Distributors (any natural or legal person or partnership offering or making available on the market EEE) with a sales area for EEE of at least 400 m² (in the case of distribution using means of distance communication, instead with storage and dispatch areas for EEE of at least 400 m²) and distributors of foodstuffs with a total sales area of at least 800 m², who offer and make available on the market electrical and electronic equipment several times in a calendar year or on a permanent basis (in the case of distribution using means of distance communication instead with total storage and dispatch areas of at least 800 m²), are obliged towards end-users to take back WEEE free of charge as follows:

a) Return/collection in the case of purchase of a new appliance and delivery to a private household.
When concluding a purchase contract for a new electrical or electronic appliance, the distributor is obliged to take back free of charge an old appliance of the same type that fulfils essentially the same functions as the new appliance.
If the place of delivery is a private household, the take-back shall be effected by a free collection. For this purpose, an old appliance of the same type with essentially the same functions can be handed over to the delivering transport company when the new appliance is delivered.
If the new appliance is sold exclusively by means of distance communication (Section 312c (2) of the German Civil Code), the following shall apply restrictively:

- The free collection of an old appliance of the same type and function shall only take place if it is an appliance of category 1 (heat exchangers), 2 (screens, monitors, appliances with screens with a surface area of more than 100 cm²) and/or 4 (large appliances where at least one of the external dimensions is more than 50 cm).
- If instead it is an old appliance of category 3, 5 and/or 6, free collection does not take place and instead the following letter b) applies to the free return.

b) Return in the case of purchase of a new appliance and return elsewhere/return of small appliances
When concluding a purchase contract for a new electrical appliance which is not delivered to a private household and when selling a new appliance of categories 3, 5 and/or 6 exclusively by means of distance communication (Section 312c (2) of the German Civil Code (BGB)) with delivery to a private household, there is the possibility to return an old appliance of the same type of appliance which es-

sentially fulfils the same functions as the new appliance to the distributor free of charge.
The same possibility exists independently of the purchase of a new electrical or electronic appliance also for old appliances which are not larger than 25 cm in any external dimension. In this case, the possibility of return by the end user to the distributor is limited to 3 old appliances per type of appliance.
In the case of sales exclusively by means of distance communication (§ 312c para. 2 BGB), the following may be returned under the above-mentioned conditions

- of old appliances of categories 3, 5 and/or 6
- of old appliances which are not larger than 25 cm in any external dimension,

by suitable return facilities at a reasonable distance from the respective end user.
Otherwise, the equipment shall be returned to the place of collection or in the immediate vicinity thereof.
Distributors must have set up appropriate return facilities for this purpose.

3. Information on the possibilities of returning old appliances
We provide information on the return options we have set up for old electrical appliances at: https://www.karcher-products.de/index.php/Entsorgungshinweise.html.

Owners of old appliances can hand them in at the facilities set up and available by public waste management authorities for the return or collection of old appliances to ensure proper disposal of the old appliances. If necessary, it is also possible to hand in electrical and electronic equipment there for the purpose of reusing the equipment. You will receive more detailed information from the respective collection or take-back point.

4. Note on data protection
Some of the old appliances to be disposed of contain sensitive personal data (e.g. on a PC or a smartphone) which must not fall into the hands of third parties.
We expressly point out that it is in the end users' responsibility to delete personal data from the old equipment to be disposed of.

5. Note on our WEEE registration number
We are registered with the Stiftung Elektro-Altgeräte Register, Nordostpark 72 in 90411 Nuremberg, Germany, as a manufacturer of electrical and/or electronic equipment under the following registration number (WEEE-Reg.-No. DE): 25822316

Batteries



Batteries must not be disposed of in regular household trash. Every consumer has the obligation to return batteries to special disposal locations.

1. Handling discs

- Always keep the CD compartment shut to prevent dust or dirt from getting into the CD mechanism.
- Do not touch the recorded surface.
- Do not stick paper or write on either side of the CD.
- Do not bend the CD.
- Only handle a disc on its outer edges.

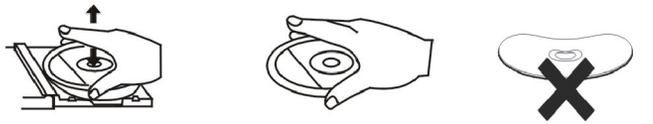

2. Storing discs

- To avoid scratches/damages always put CDs back into their cases after use.
- Do not expose CDs to direct sunlight, dust, dirt, high temperatures, high humidity or water.

3. Cleaning discs

- Use a soft cloth to wipe fingerprints and dust from the disc surface.
- Carefully move the cloth from the center of the disc to its edge:



Correct *False*

- Never use benzene, thinners, record cleaner fluid or antistatic spray to clean CDs.

4. Compatibility

- Due to the numerous compression methods, some discs may not play.

NOTES ABOUT THIS INSTRUCTION MANUAL

1. This instruction manual is published by the manufacturer without any warranty. Corrections and changes of this instruction manual for the removal of typographic mistakes and editorial inaccuracies as well as due to (technical) improvements (changes) of the devices can be done by the manufacturer at any time without announcement. Changes of this kind are considered in future versions of this user manual. All rights reserved.
2. All figures are only for illustration and do not always show the exact representation of the product.
3. This unit is not intended for use by persons (including children) with reduced physical, sensory, or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the unit.

FURTHER NOTES ON THE DEVICE
Setting a safe volume level

- If you continually listen to loud music, your hearing gradually adapts to it and gives you the impression that the volume is lower.
- What seems normal to you can be already for long time too loud and unhealthy.
- To protect yourself from this, set the volume to a low level.
- Increase the volume slowly.
- Damage to your hearing can be extensive and cannot be reversed.
- If you notice a hearing problem, please consult a doctor.

Condensation

- Condensation may occur when moving the device from a cold to a warm environment. If there is moisture inside the player, it may not operate properly. Don't turn on the device and wait about one hour for the moisture to evaporate.

Saving energy

- If the unit is not used for a long period of time, it should be unplugged from the AC socket.
- If there is no playback in any mode (except radio) for approximately 15 minutes and no button is pressed, then the unit will switch into standby mode automatically. To turn the unit back on, press the ⏻ button.

Unpacking

- Take out carefully the unit from the packing. Please keep the packing for further use.
- Carefully remove possible protection cardboards and slipcovers.

Package Contents



User Manual



Remote Control



AAA Battery x1

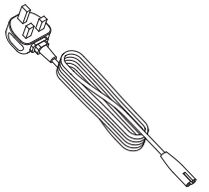

AC power cord



FM/DAB antenna

Location of Controls

Front

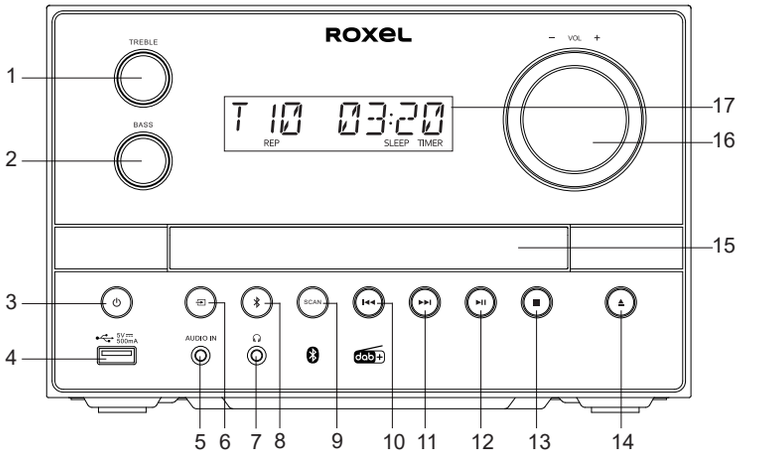

1. TREBLE button
2. BASS button
3. Power button
4. USB
5. Audio In
6. Source button
7. Headphone
8. Bluetooth button
9. SCAN button
10. Previous button
11. Next button
12. Play/Pause button
13. STOP/MENU button
14. Open/Close button
15. Disc tray
16. Volume knob
17. Display

Rear

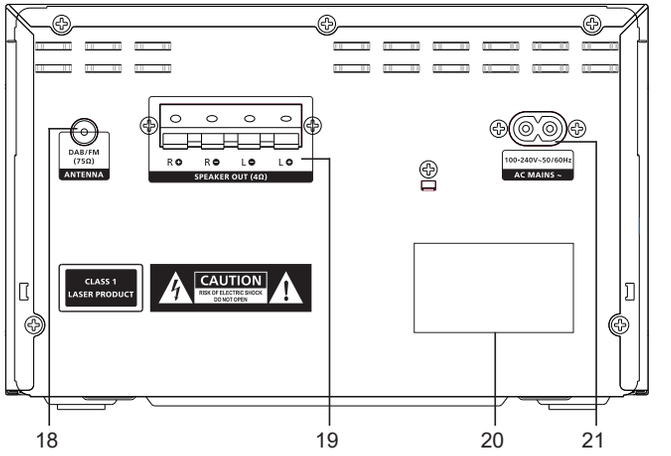

18. FM/DAB+ antenna jack
19. Speaker output
20. Rating lable with serial number
21. AC mains

Remote Control

1. **Standby On/Off button**
2. **CD/BT button**
   Press to select CD mode.
   Press again to select BT mode.
   In Bluetooth mode, press and hold for more than 2 seconds to disconnect the currently connected device and enter pairing mode.
3. **DAB/FM button**
   Press to select DAB mode.
   Press again to select FM mode.
4. **Back button**
   CD / USB mode: Skip to the previous track; fast rewind
   FM mode: Select the previous frequency
   DAB mode: Select the previous DAB station
   BT mode: Skip to the previous track
5. **Play/Pause and OK button**
   CD / USB / BT mode: Play / Pause
   Menu: Confirm settings
6. **MODE button**
   CD / USB mode: Selct playback mode
   FM mode: Switch between stereo and mono
7. **Stop/Menu button**
   Stop playback or delete a program
   DAB mode: Open the menu
8. **ALBUM/PRESET button**
   CD / USB mode: Select the next album (if available)
   DAB / FM mode: Select the next preset station
9. **VOLUME + button**
   Increase the volume.
10. **ALBUM/PRESET button**
    CD / USB mode: Select the previous album (if available)
    DAB / FM mode: Select the previous preset station
11. **VOLUME – button**
    Decrease the volume.
12. **CLOCK button**
    Press in any playback mode to display the time.
    Press and hold to open the time-setting mode.
13. **SLEEP/TIMER button**
    Press in standby mode to switch the timer on or off.
    Press and hold in standby mode to open the timer settings.
    Press repeatedly in any playback mode to set the sleep timer.
14. **Auracast button**
    Press to select Auracast receiver mode
    Press and hold to turn on/off the Auracast broadcast

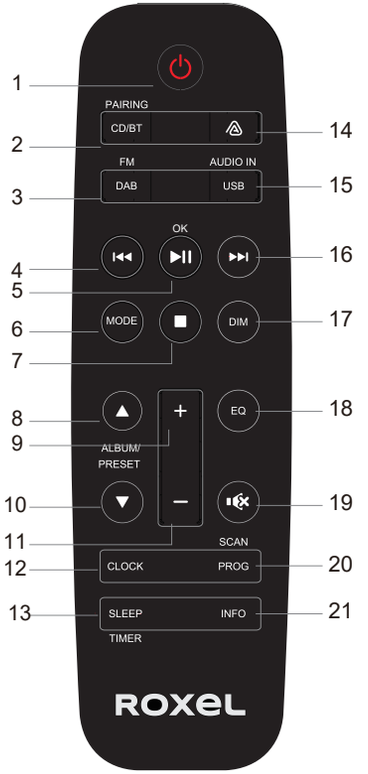

15. **USB/AUDIO IN button**
    Press to select USB mode.
    Press again to select AUDIO IN mode.
16. **Forward button**
    CD / USB mode: Skip to the next track; fast forward
    FM mode: Select the next frequency
    DAB mode: Select the next DAB station
    BT mode: Skip to the next track
17. **DIM button**
    Press to adjust the display brightness.
18. **EQ button**
    Press to select different equalizer presets.
19. **MUTE button**
    Press to mute the sound.
20. **PROG/SCAN button**
    CD / USB mode: Program the track sequence.
    DAB / FM mode: Store radio stations; scan for radio stations.
21. **INFO button**
    Display playback information.

Power Supply & Antenna

Main Unit

- Connect the power cable to a suitable wall socket.
- Make sure that the output power of the wall outlet matches the required power of the unit as indicated on the rating label.
- Connect the supplied wire antenna to the 75Ω connector on the unit back.



Wire Antenna

Remote Control

1. Remove the battery compartment cover on the back of the remote control.



2. Load one AAA/1.5V battery (not included) into the battery compartment making sure that the battery is inserted with the correct polarity (+/-) as indicated inside the battery compartment.



3. Close the battery compartment cover.



Notes:

- The remote control works within a distance of approximately 8 metres from the sensor and within an angle of about 30° from the left and right side.
- Pay attention to the safety information on page 21.
- If the remote control is not used for a longer period of time, batteries should be removed.

Basic Functions

Switching the Unit On & Off (Standby Mode)

1. Power the unit as described above. The unit is now in standby mode.
2. To switch the unit on, press the ⏻ button. The unit will switch to the last mode used.
3. To switch the unit off (standby mode), press the ⏻ button.

Function Selection (Source)

- To select between modes (CD, BT, Auracast receiver, DAB, FM, USB, Audio In), repeatedly press the **SOURCE** button on the unit or the direct source button on the remote control (**CD/BT, Auracast receiver**,**DAB/FM, USB/AUDIO IN**).

Volume Control

- Increase the volume by pressing the **VOLUME +** button on the remote control or by turning the volume knob on the unit clockwise.
- Decrease the volume by pressing the **VOLUME -** button on the remote control or by turning the volume knob on the unit counter-clockwise.

Mute

- To mute the sound, press the 🔇 button on the remote control. Press the button again to turn the sound back on.

Equalizer (EQ)

- This unit is equipped with 5 different equalizer presets (Balanced, Warm, Bright, Powerful, Clear).
- To select between these presets, repeatedly press the **EQ** button on the remote control.

Display Dimmer

- The display brightness can be adjusted in 3 levels (high “HIGH”, medium “MED”, low “LOW“).
- To select between these levels, press the **DIM** button on the remote control repeatedly.

Sleep Timer

The sleep function enables you to set a timer after which the unit will turn itself into standby mode automatically.

- While in any playback mode, press the **SLEEP/TIMER** button on the remote control repeatedly to set the desired time.
- You can select 120 to 15 minutes. “SLEEP” will be shown in the display.
- To check how much time is left on the set timer, press the **SLEEP/TIMER** button once.
- To cancel the sleep function, press the **SLEEP/TIMER** button repeatedly until “OFF” appears in the display. “SLEEP” will disappear from the display.

Time & On-Timer

Notes:

- The time is automatically synchronized through DAB+ signal, so if there is a radio signal it is not necessary to manually set the time.
- While in any playback mode, press the **CLOCK** button on the remote control once to display the current time. After about 3 seconds the display will switch back to the current playback mode.

Manual Time Setting

Time must be set while the unit is in on mode.

1. Press and hold the **CLOCK** button for 2 seconds to enter the clock setting mode. The format starts flashing. Select 12h or 24h format using the buttons ⏮ / ⏭.
2. Press the **CLOCK** button again. The hour starts flashing. Select the current hour using the buttons ⏮ / ⏭.
3. Press the **CLOCK** button again. The minute starts flashing. Select the current minute using the buttons ⏮ / ⏭.
4. Press the **CLOCK** button again. The time is now set and will be displayed.

On-Timer

An on-timer can only be set while the unit is in standby mode.

1. While the unit is in standby mode, press and hold for 2 seconds the **TIMER** button on the remote control. “TIMER” will be shown and the hour will start flashing. Select the desired hour using the buttons ⏮ / ⏭.
2. Press the **TIMER** button again. The minutes will start flashing. Set the desired minutes using the buttons ⏮ / ⏭.
3. Press the **TIMER** button again. The alarm mode will be flashing. Select the desired mode (DISC, USB, FM or DAB) using the buttons ⏮ / ⏭.
4. Press the **TIMER** button again. The alarm volume will start flashing. Set the desired volume using the buttons ⏮ / ⏭.
5. Press the **TIMER** button again to confirm your settings. The alarm is now set and will sound at the set time. “TIMER” will be shown in the display.

Activating/Deactivating an On-Timer

- To deactivate or reactivate a set on-timer, press the **TIMER** button once while the unit is in standby mode.

Stopping an Active On-Timer

- When the on-timer is sounding, press the ⏻ button to turn it off. The on-timer will sound again the next day, unless it is deactivated manually.

DAB+ Radio

1. Switch the unit on as described previously.
2. Select the DAB mode by pressing the **SOURCE** button repeatedly or by pressing the **DAB/FM** button on the remote control.
3. When the unit is switched into DAB mode for the first time, it will automatically tune for available stations.
   Alternatively: Press and hold the **SCAN** button on the remote control, or press the ■ button to enter the DAB menu. “SCANNING” is shown in the display. Press the ⏯ button to start the scan.
4. Once the scan is completed the radio will play the first station in the station list.
5. Select a desired radio station by pressing the ⏮ / ⏭ buttons.

Manually Store Radio Stations

This unit enables you to store up to 20 radio stations:

1. Tune to a radio station which you would like to store.
2. Press the **PROG** button on the remote control. “P01” will be flashing.
3. Select a desired preset (1 - 20) on which you want to store the current frequency by pressing the ▲ or ▼ button on the remote control.
4. Press the ⏯ button to confirm your setting. “STORED” will be shown in the display
5. Repeat steps 1 - 4 to store up to 20 stations.
6. To recall a stored station, press the ▲ or ▼ button until you reach the desired preset.

DAB+ Menu

Press the ■ button while in DAB+ mode to enter the DAB+ menu. Inside the menu you can select between the following menu items by pressing the ▲/▼ buttons (to enter menu items and to confirm a selection, press the ⏯ button; for menu item settings use the ⏮ / ⏭ buttons; to exit menu items and the menu press the ■ button):

Menu Item	Function
Scan	Full scan for all available radio stations.
Manual	Manually tune to a specific channel/frequency.
DRC	This function reduces the difference between the loudest and quietest audio being broadcast. Effectively, this makes quiet sounds comparatively louder, and loud sounds comparatively quieter. *Note:* DRC only works if it is enabled by the broadcaster for a specific station.
Prune	Deletes all invalid stations from the station list.
System	Reset or Check Version

Info Display

To display information (if broadcast by station) repeatedly press the **INFO** button on the remote control.

FM Radio

1. Switch the unit on as described previously.
2. Select the FM mode by pressing the **SOURCE** button repeatedly or by pressing the **DAB/FM** button on the remote control twice. The frequency will be shown in the display.
3. Select a desired radio station by pressing the ⏮ or ⏭ button repeatedly.
4. To automatically search for the next available radio station, press and hold for 2 seconds the ⏮ or ⏭ button.
5. Stereo/Mono mode is available for FM radio stations.
   In stereo mode you will see “ST” in the display below the frequency. If there is no “ST” indication in the display below the frequency then the radio is mono mode. For better reception you can force mono mode by pressing the **MODE** button on the remote control.

Manually Store Radio Stations

This unit enables you to store up to 20 radio stations:

1. Tune to a radio station which you would like to store.
2. Press the **PROG** button on the remote control. “P01” will be flashing.
3. Select a desired preset (1 - 20) on which you want to store the current frequency by pressing the ▲ or ▼ button on the remote control.
4. Press the ⏯ button to confirm your setting. “STORED” will be shown in the display
5. Repeat steps 1 - 4 to store up to 20 stations.
6. To recall a stored station, press the ▲ or ▼ button until you reach the desired preset.

Automatically Store Radio Stations

Rather than manually storing stations, you can also let the unit automatically store found stations:

1. While in FM mode press and hold the **PROG** button on the remote control until the frequency search starts.
2. The unit will now scan and consecutively store found stations (up to 20).
   Once finished, the unit will play the station which was first available.
3. To recall a stored station, press the ▲ or ▼ button until you reach the desired preset.

Note: The auto-store overwrites any stations that were stored manually.

RDS (Radio Data System)

This product is equipped with an RDS decoder. RDS allows text information to be transmitted by a radio station together with the audio broadcast. This text information can include name of the radio station, name of the current program or song, news headlines, etc. and may vary from station to station. To view RDS info press the **INFO** button repeatedly.

Notes:

- Not all radio stations transmit RDS information. In such cases the display will show “NO DATA”.
- RDS information broadcast may vary from station to station.
- If the radio signal is weak, transmission of RDS information may be not available, disturbed or not shown properly.

CD Player

Playing Discs

1. Switch the unit on and select the DISC mode by pressing the **SOURCE** button repeatedly or by pressing the **CD** button on the remote control.
2. Open the CD drawer by pressing the ⏏ button. Insert a disc with the printed side.
3. Close the CD drawer by pressing the ⏏ button once again. The CD is being read and the total number of tracks will then be shown in the display.
4. Playback starts automatically with the first track.
5. To temporarily stop the playback (pause), press the ⏯ button once. Press the but ton again to resume playback.
6. To skip to the previous track,press the ⏮ button once.

Fast Forward / Fast Rewind & Skipping Tracks

- To skip to the previous track, press the ⏮ button once.
- To skip to the next track, press the ⏭ button once.
- To fast forward the currently playing track, press and hold the ⏭ button. Once you reach the desired section of the track, release the button to resume normal playback.
- To fast rewind the currently playing track, press and hold the ⏮ button. Once you reach the desired section of the track, release the button to resume normal playback.

Repeat / Random Modes

At any time during playback press the **MODE** button on the remote control repeatedly to select between

- Repeat One - the current track will be repeated, the display will show “REP ONE”.
- Repeat All - All tracks on the CD or USB will be repeated, the display will show “REP ALL”.
- Repeat Folder (if the CD or USB contains albums) - the current folder will be repeated, the display will show “REP ALM”.
- Random Playback (Shuffle) - All tracks will be played in random order, the display will show “SHUF ON”.

Note:

- To disable the Random and Repeat functions, press the according **MODE** button repeatedly until “OFF” is shown.

Programming Track Order

You can store up to 20 tracks (audio discs) and up 99 tracks (MP3 discs) in a desired sequence.

1. While in CD stop mode, press the **PROG** button. “P01” and “T01” will be shown in the display.
2. Using the ⏮ / ⏭ buttons, select the track to be played first in the sequence.
3. Press the **PROG** button again. “P02” will be flashing in the display.
4. Repeat the steps 2 - 3 to select up to 20 tracks (or 99 tracks) for your sequence.
5. Press the ⏯ button to start the playback of your sequence.
6. To stop playback, press the ■ button. To delete your sequence press this button a second time. The display will show “CLEARED”.

ID3 Tags

- When the files on the inserted disc are equipped with ID3 tags (artist, track and album names)
- Press the **INFO** button on the remote control repeatedly to toggle through the different information.

USB

Playing MP3 files from USB

1. Insert a USB stick into the USB port on the unit.
2. Switch the unit on and select the USB mode by pressing the **SOURCE** button repeatedly or by pressing the **USB** button on the remote control.
3. The USB is being read and the playback will start automatically with the first track.
4. To temporarily stop the playback (pause), press the ▶II button once. Press the but ton again to resume playback.
5. To stop playback, press the ■ button.

Playback modes

Skipping, fast forwarding and fast rewinding tracks, repeat modes and random function as well as ID3 tag display in USB mode are the same as for MP3-CD playback. Please see the previous chapter for the instructions.

Notes:

- A USB device must always be connected directly to the USB port of this product. The use of a USB extension cord is not supported by this product. The USB port of this product cannot communicate with a computer directly.
- The reading time for a USB drive varies depending on the speed of the memory device and the number of songs and folders. In some cases the reading time may be as long as 60 seconds.
- When the unit is off (standby mode) no USB device should be connected.
- Always switch off the unit before removing a USB flash drive to prevent damage to your USB device. The manufacturer is not responsible for the loss or damage of data.
- Due to numerous methods of compression it could be that some files or USB flash drives cannot be played.

Bluetooth

The Bluetooth function let's you stream music from your smartphone, tablet or any other Bluetooth enabled device through the speakers of Roxel Encore.

1. To use the Bluetooth feature, first switch the unit into BT mode by pressing the **SOURCE** button repeatedly or by pressing the **BT PAIRING** button on the remote control.
2. Go to your device's Bluetooth settings and search for Roxel Encore.
3. Once your device shows Roxel Encore, connect and pair it. When the Bluetooth connection has been established a sound will be heard, indicating a successful pairing.
4. You can now enjoy music from your device through the speakers of Roxel Encore. Use the volume control of the appliance as well as your paired device to set the desired volume.
5. All playback functions can be managed through the Bluetooth device's controls. Previous/Next track can also be selected with the unit's remote control.

Notes:

- Bluetooth works best within a range of up to 8 to 10 metres. Distance varies depending on different Bluetooth devices and local conditions (e.g. walls, metallic casing that covers the device, or other devices nearby that operate in the same frequency).
- The appliance can be connected to two Bluetooth devices at the same time.
- If the connected device goes out of Bluetooth range, the appliance will reconnect automatically when the device comes back into range.
- When switched back to Bluetooth mode, the appliance automatically starts reconnecting with last paired device, if available.

- To avoid your previously paired device automatically connecting to Roxel Encore, unpair it in your device's settings.

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

AUDIO IN

You can connect the audio output of an external device such as an MP3 player to this unit to listen to the sound of that device through the amplifier of this music system.

1. To connect the external device please use a standard stereo audio cable (3.5 mm to 3.5 mm plugs, *not included*) to connect the headphone out or audio line out of the external device to the Audio input socket of this unit.
2. Turn on the unit and select AUDIO IN mode by pressing the **SOURCE** button repeatedly or by pressing the **USB/AUDIO IN** button on the remote control twice.
3. Switch the external device (e.g. MP3 player) on.
4. Start playback of the external device and adjust the volume control of the main unit to the desired level.
5. Remember to switch off the unit when you are finished using the external device.

Specifications

Power Supply:	AC 100 - 240V ~ 50/60Hz
Power Consumption in Standby Mode With Information/Status Display:	≤ 0.8 W
Period after which the equipment reaches automatically standby mode:	15 Minutes
Radio Frequency Range:	DAB+ (Band III): 174.928 - 239.200 MHZ FM: 87.5 - 108 MHz
Max. radio frequency power transmitted:	Bluetooth: ≤ 7 dBm
Dimensions (WxDxH) ca.:	230 x 140 x 230 mm(Main Unit) 180 x 270 x 258 mm(Speakers)

Technical specifications and design may change without notice.

AURACAST OPERATION

You can broadcast your music to this product or any other Auracast-compatible products.

Auracast receiver

1. Press ⏃ to select the Auracast source, or press source button on main unit to switch to Auracast source.
   - [AURACAST RECEIVER] is displayed.
   - The cyan indicator blinks.
2. If you enter Auracast source for the first time or if the station list is empty, the product performs a full scan automatically.
   - [SCANNING] is displayed.
   - The micro system will automatically search for nearby Auracast broadcasts and connect to the unencrypted broadcast with the strongest signal.
   - If Auracast broadcast is not found within 20 seconds, it will enter idle mode and the cyan light will blink slowly.

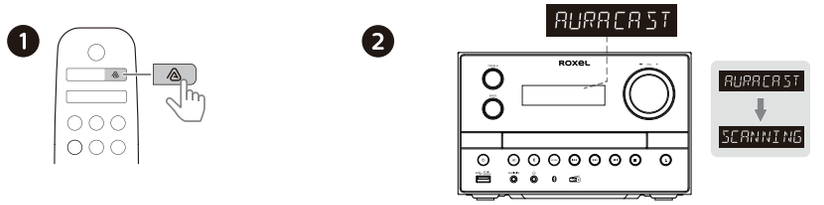

3. On your mobile device Roxel Encore that supports Auracast, follow the instruction to enable Auracast broadcast.
4. After successful connection, the cyan indicator turns solid.
5. Auracast source name is displayed.
6. Select and play audio from your Auracast enabled mobile device Roxel Encore to this product.
7. Follow the Auracast connection on any additional Auracast-compatible products you want to include.

To disconnect Auracast, you can:

- Switch the product to another source.
- Deactivate Auracast broadcast on your mobile device Roxel Encore.

Manually scan Auracast broadcast

In Auracast receiver mode, press to rescan Auracast broadcast channel.

Select Auracast broadcast

Press |◀◀ / ▶▶| to select an Auracast broadcast.

Notes:

- Only unencrypted broadcast is selected and encrypted broadcast is skipped.

Auracast broadcast

- Auracast receiver and Auracast broadcast cannot be turned on simultaneously. If you try to turn on Auracast broadcast in Auracast receiver mode, you will not be able to switch successfully. Vice versa.

1. In DISC/Bluetooth/DAB/FM/USB/Audio in source, press and hold the button for 3 seconds to enter into Auracast broadcast.
2. The purple LED stays on when Auracast broadcast is turned on.
3. You can broadcast to any number of Auracast enabled products,follow the instruction to enable Auracast connection.
4. Press the button SOURCE to switch between DISC/Bluetooth/DAB/FM/USB/Audio in to play different audio sources.

Disconnect Auracast broadcast

- Press and hold the button for 3 seconds. Exit Auracast broadcast from your micro system.
  ↳ LED blinks purple 3 times.